



- 1, 在手机蓝牙按钮长按，找到 BlueStack 这个蓝牙设备，点连接，密码 1234

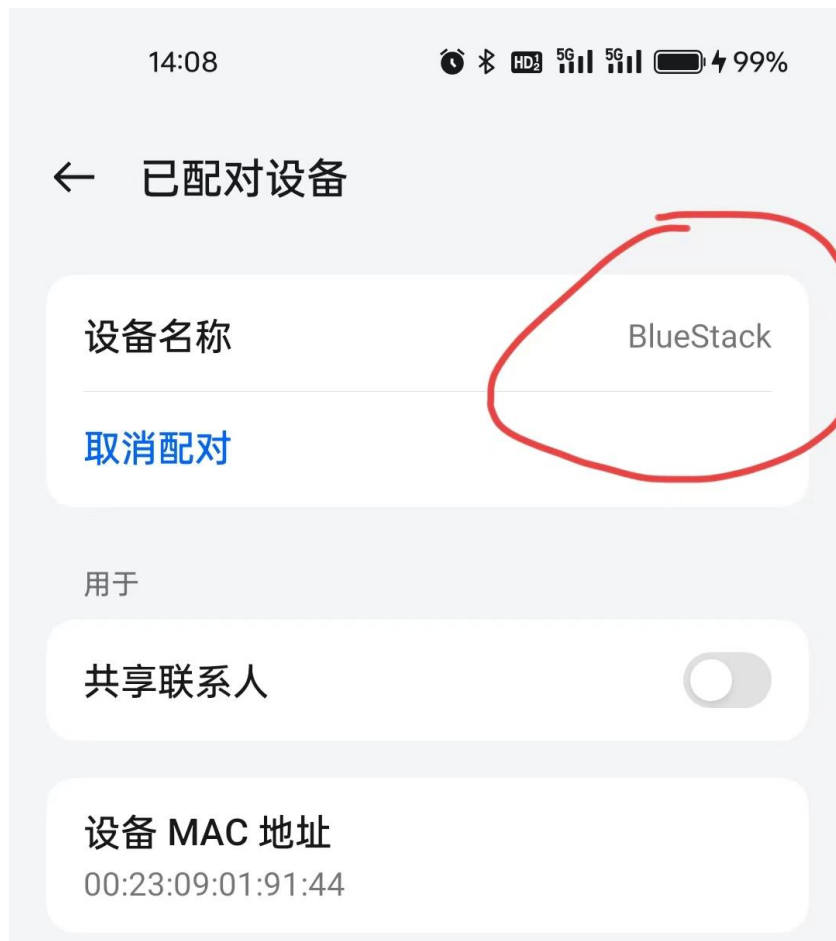

2. 打开手机 BLUEDV 软件，点击 SETUP 设置。设置好后保存

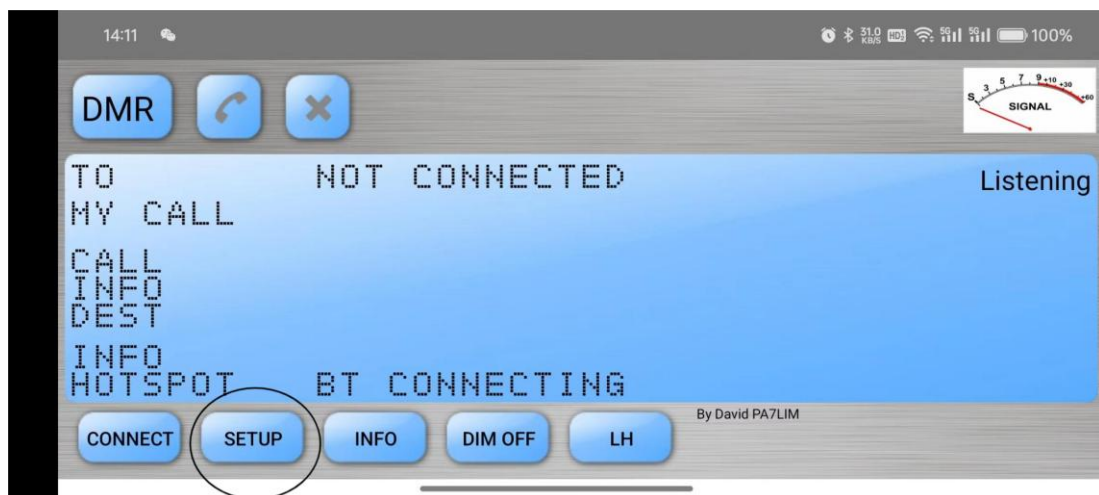

The screenshot shows the "DMR HS id" configuration window. Red circles highlight several fields: "Call" (BG7YRE), "DMR id" (4605956), "Your info" (BlueDV by PA7LIM), "DMR Master password" (12345678), "IPSC2 port" (62031), "Default reflector" (4400), "ser2net IP" (192.168.5.155), and the "SUBMIT" button. Red Chinese text labels are placed next to some fields: "呼号" (Call) next to BG7YRE, "数字ID" (Digital ID) next to 4605956, "安全密码" (Security Password) next to 12345678, "服务器" (Server) next to 62031, and "设置后保存" (Save after setting) next to the SUBMIT button.

Field	Value
Call	BG7YRE
DMR HS id	04
DMR id	4605956
Your info	BlueDV by PA7LIM
Enable APRS	<input type="checkbox"/>
RPT1 valid	<input type="checkbox"/>
DSTAR freq	434600000
DMR freq	438850000
DMR QRG	0
DMR Master	
DMR Master password	12345678
No inband data	<input type="checkbox"/>
Manual IPSC2	<input type="checkbox"/>
IPSC2 host	hblinkspain.duckdns.org
IPSC2 password	passw0rd
IPSC2 port	62031
DMR+ Master	
Default reflector	4400
FUSION freq	434000000
QTH Locator	JO22MB
Radio type	DVMEGA
Enable ser2net	<input type="checkbox"/>
ser2net IP	192.168.5.155
RX/TX colors	<input checked="" type="checkbox"/>

CANCEL SUBMIT

3. 最后点左下角连接，然后连接正常上面电话手柄会变绿色，然后点绿色电话手柄即可测试发射接收。

